

AccuVote-OS Opening Quick Reference Guide

1 Position the ballot box in the appropriate location at the polling place.



2 Unlock and open the retaining door at the front of the ballot box.



3 Unlock the security plate.



4 Remove the security plate, and place it in the slot.



5 Unzip the carrying case and remove the OS unit.



6 Slide the OS unit onto the guide rails in the ballot box.



7 Feed one end of the power cord through the back of the ballot box and plug the other end into the power outlet.



8 Unlock and open the printer compartment.




9 Power the unit on by flipping the red power switch



10 The Election Zero report will print automatically.



11 Use the back of the printer cover sign the zero report. **Do not tear off the report.**

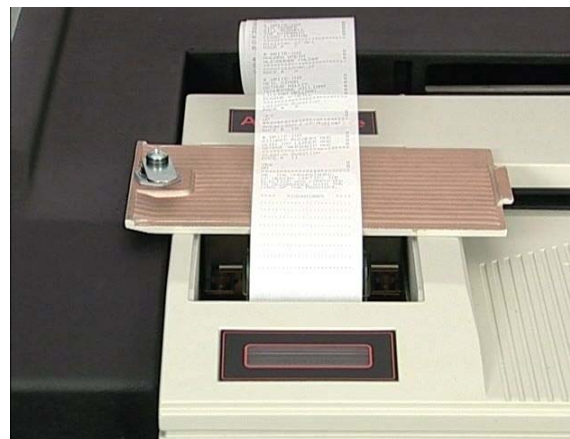

12 Roll the report back up and put it in the printer. Relock the printer cover.



13 The screen will display "NEED ANOTHER COPY?"



14 Press the NO button.



15 Slide the OS unit back onto the ballot box.



16 Relock the retaining door.

