



## MV-464

1. Ballot
2. Candidate / Issue Selection Buttons
3. Write-in Window
4. Write-in Access Button
5. Advance Ballot Button
6. Information Window
7. Review Ballot Button
8. Cast Vote Button
9. Judge's Compartment
10. Custodian's Compartment

### To Make Your Selections

Press the gray button beside each candidate or issue of your choice. This turns on the light next to the button. If you change your mind, press the button again to cancel your selection. You may choose as many candidates as you're eligible to select for each office, but no more. If the ballot is more than one page, press the green Advance Ballot bar at the bottom of the panel. If there are more pages, the light will stay on. You must view all pages of your ballot before the machine will allow you to complete the voting process. To review your ballot, press the blue Review Ballot bar.

### To Cast Your Vote

Once your selections are final, press the red Cast Vote button to record your vote. This button completes the voting process, and you may press it only once. Make sure you have made all your selections before you press the red Cast Vote button.

### To Cast A Write-In Vote With MicroVote

- If a write-in option is available, you may press the gray write-in selection button. The light next to it will start blinking. You may change your mind by pressing the same write-in button again to turn out the light, and then vote as usual.
- If you select to write-in a candidate, press the Write-in Window bar on the lower left panel where the lights are blinking. The window will open and the lights will go out.
- Write in the name you want on the paper tape in the window.
- The window will close when all selections have been made and you push the red Cast Vote button.