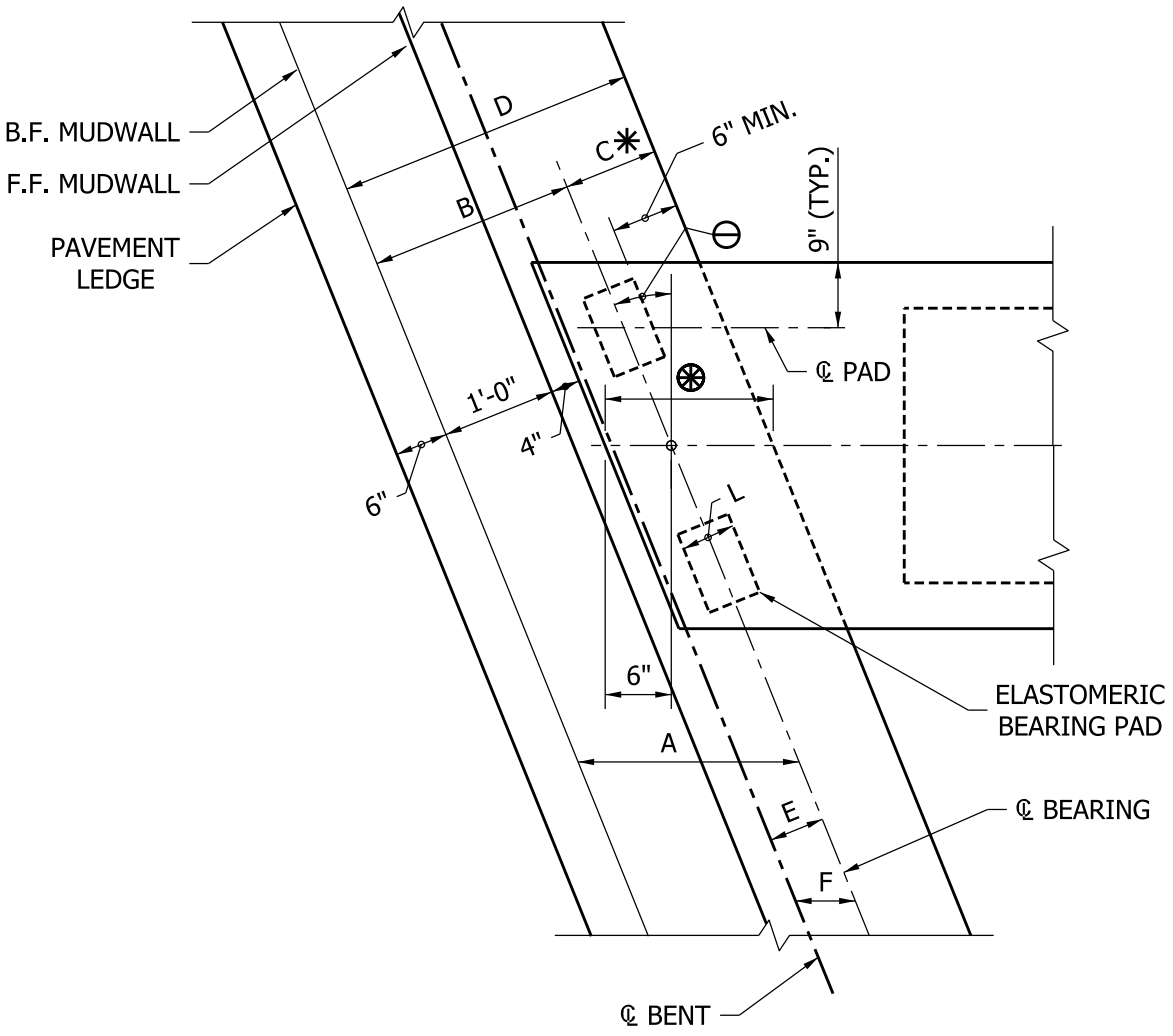

A = (1'-4") sec ⊖ + 6"
B = A cos ⊖
C = 0.5 L + 6"
D = B + C

ACTUAL C = D - B
E = B - 0.5 D
F = E sec ⊖

✳ USE FOR SIZING CAP ONLY. ROUND UP TO AN INCREMENT OF 3"
⊛ CHECK SEISMIC MINIMUM SUPPORT LENGTH FOR EXPANSION BENT.

BOX BEAM: END BENT CAP SIZING AND BEARING LAYOUT DETAILS

Figure 63-16 S