

NOTES:


- ① PCCP retrofit load transfer may be utilized at perpendicular joints, skewed joints, or at random cracks.
- ② If lane width is 12 ft, use 3' offset. If lane width is 14 ft, use 4' offset.
- 3. Dowel slots shall be constructed parallel to pavement centerline.

INDIANA DEPARTMENT OF TRANSPORTATION

**RETROFIT LOAD
TRANSFER FOR LOAD**

SEPTEMBER 2004

STANDARD DRAWING NO. E 507-RLTC-02

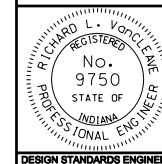

/s/ Richard L. VanCleave 9-01-04
DESIGN STANDARDS ENGINEER DATE

/s/ Richard K. Smutzer 9-01-04
CHIEF HIGHWAY ENGINEER DATE

DESIGN STANDARDS ENGINEER