


# SHORT-TERM RADON TEST KIT

## IS YOUR HOME SAFE?



- Shipping & Analysis Included<sup>+</sup>
- Safe and Easy to Use
- 3-7 Day, Short-Term Air Test
- Nationally Accredited Laboratories

(NORTH CAROLINA LAB)

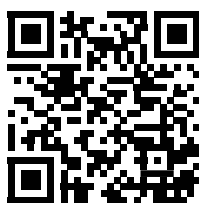

Scan QR code for  
more information and  
video instructions.

COMPLETE  
SINGLE  
HOME TEST

SAME BUSINESS DAY RESULTS\* | TRACK ANALYSIS ONLINE

\*After test kit receipt at lab

+Included shipping is by USPS only. Shipping by other means is at the user's expense.



**DO NOT BREAK PLASTIC SEAL  
UNTIL READY TO DEPLOY TEST**

## IMPORTANT REMINDERS

Hang the kit at eye level to knee level, avoid drafts, moisture, and direct sunlight.

- Maintain Closed Building Conditions for the duration of your test (all windows and exterior doors should stay closed for 12 hours before and during the test period).
- Do not test during severe weather: hard rains, heavy snows, strong winds.
- Place your test in the lowest level of your home that is used on a regular basis.
- Hang the test kit around eye level where it will not be disturbed. You can use string to hang it from a central ceiling light or ceiling fan, or hang it on an interior, non-masonry wall at least 3 feet from windows, doors, hallways, exterior walls, and heat/AC vents.
- Keep test out of direct sunlight and away from heat sources like stoves, fireplaces, and heaters.
- Do not test in enclosed areas of less than 100 ft<sup>3</sup> (3m<sup>3</sup>).
- AVOID testing in areas of high humidity like bathrooms, kitchens, laundry rooms, closets, or damp basements. If this is unavoidable, test for no more than 4 days.
- For real estate transactions, use two kits 6 inches apart. Visit [epa.gov/radon](http://epa.gov/radon) for EPA Real Estate protocols.

### Before Your Test

- Conduct your test before the "Use By" date
- Record the serial number of your test kit
- Scan QR code or to go [radon.com/register](http://radon.com/register) to register your test kit online
- Record the start date, time, and room temperature
- Test the lowest livable area of the structure
- Hang the kit from the plastic hook; do not lay on a table

### During Your Test

- Keep ALL windows in the building closed
- Close all doors behind you when entering or leaving
- Do not move the test kit once the test has begun
- Operate heating and air systems normally while avoiding drafts directly onto test devices

### After Your Test

- Keep a record of your test device number before returning to the laboratory
- Go online and fill in end of test information
- Remove and recycle the plastic hook and cardboard insert
- Seal the kit after removing the cardboard insert
- Do not tear the kit or the brown paper envelope inside
- Return the kit to our lab as soon as possible

More details and videos at [radon.com/instructions](http://radon.com/instructions).

## HOW TO GET YOUR ANALYSIS

### Returning Your Kit to the Lab

After your test is completed (exposed for more than 3 days but less than 7), follow the ending instructions on the reverse side and return your sealed kit(s) to the lab for analysis as soon as possible. The sooner we receive your kit, the more accurate your results.

Radon gas decays quickly requiring the test kit to arrive at the lab within 11 days after completion. Occasionally, test kits are lost or delayed beyond this timeframe during the USPS shipping process. When this occurs, the lab is unable to provide results. If you wish to expedite your return shipping at your own expense, we recommend selecting one of the following delivery methods:

- FedEx or UPS 3-day, 2-day, or Next Day delivery
- USPS Priority Mail Express
- USPS Priority Mail

### FedEx/UPS Address

Air Chek  
1936 Butler Bridge Road  
Mills River, NC 28759

### USPS Address

Air Chek  
PO Box 2000  
Naples, NC 28760

Once we receive your sealed kit, you can enter its serial number at [radon.com/results](http://radon.com/results) to check the status of your analysis.

Air Chek makes every reasonable effort to maintain the highest possible quality control during the manufacture and analysis of our test devices. However, we cannot control what the end-user does with or to our test devices when they are not in our possession. Our manufacturing, analysis, and reporting procedures include several checks and certification steps (such as double-entry of user-provided information). Therefore, we cannot provide a warranty of any kind, expressed or implied, including without limitation any implied warranty of merchantability or fitness with respect to any item furnished, information supplied, or services rendered by Air Chek. **Before any action is taken on the basis of test results or analysis provided to you by Air Chek we recommend that further testing be conducted.** Neither Air Chek nor any of our employees or agents shall be liable under any claim, charge, or demand, whether in contract, tort, or otherwise for any and all losses, costs, charges, claims, demands, fees, expenses, injuries, or damages (including without limitation incidental or consequential damages which are hereby excluded) of any nature or kind arising out of connection with, resulting from, or sustained as a result of any item furnished, information supplied, or service rendered to by Air Chek. NJ MEB#90122



TAKE THE NEXT  
STEP, FIND A  
PROFESSIONAL  
[radon.com/findpro](http://radon.com/findpro)



This device will be  
analyzed by Air Chek.

Air Chek radon test devices and  
laboratory are certified nationally  
and certified and/or licensed in all  
states where required.

NJ MEB# 90122

For details visit  
[radon.com/instructions](http://radon.com/instructions).

Air Chek is a brand of RadonAway.



## WHAT YOU NEED TO KNOW ABOUT RADON



Radon is an invisible, odorless, colorless radioactive carcinogen responsible for 21,000 lung cancer deaths per year in the U.S. alone. It enters your home from the soil below.



The U.S. Surgeon General warns that radon is the **second leading cause of lung cancer and the #1 for non-smokers**. The best way to protect your family is to test your home.

## TESTING IS SAFE AND EASY.



Test your home with the enclosed radon test device. Follow the instructions from the Quick Start Guide included to fill out test information online.



Return the device as instructed for your free analysis by Air Chek.™



Go online to [radon.com](http://radon.com) to track your results. (Available the same business day kit is received by the laboratory.)

**MADE IN  
USA**  
WITH US AND IMPORTED PARTS

INI 154 Rev A

# QUICK START GUIDE

# SHORT-TERM RADON TEST

## BEFORE YOU BEGIN!

- Ensure that testing guidelines are followed.
- **Do not** open test device until you are ready to start your test.

Record your device number(s):

## Start Test

REMOVE PLASTIC SLEEVE

### 1 Scan QR code or write on test kit

Scan the QR code or use a pen to fill in fields on the form on the back of the test kit envelope.

Write your name, address, and email, placing one letter or number in each box.


Please make sure to fill in the start of the day and hour and record your device number for your records.

### 2 Prepare the kit

**GRIP** securely at the top and bottom.

**PINCH** gently at the top until cardboard folds at perforation.

**PUSH** to ensure a snug fit all around.

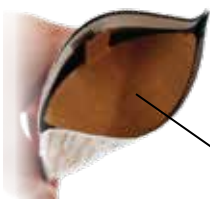

Radon gas easily passes through the draft shield.

### 3 Hang the kit

at breathing level (2-5ft from floor) away from drafts, heat sources, and out of direct sunlight. Your thermostat would be an ideal location

See reverse side for more details.

## Preferred Method

Scan the QR code with your mobile phone or visit [radon.com/register](http://radon.com/register) to register your device and start your test.



## End Test

AFTER 3-7 DAYS  
(72-168 HOURS)

### 4 Write on test kit

Use a pen, not a pencil.

Fill in end day and end hour.

Fill in answers to all remaining questions below or go online and fill in end of test information.

### 5 Recycle hook and cardboard

or discard – do not leave inside.

### 6 Seal the kit

to ensure no radon escapes.

**PEEL** and remove adhesive strip.

**PRESS** together to form airtight seal.

## QUESTIONS? CALL US!

Lab: 800-247-2435

Details and videos online:

[radon.com/instructions](http://radon.com/instructions)

expose for a minimum of

**3 DAYS**

but for no more than 7

## TIME SENSITIVE!

UPON COMPLETION, RETURN TEST KIT AS SOON AS POSSIBLE. SEE REVERSE SIDE FOR DETAILS.

